


IGNITION SWITCH WIRING PLUG

(seen from switch side)

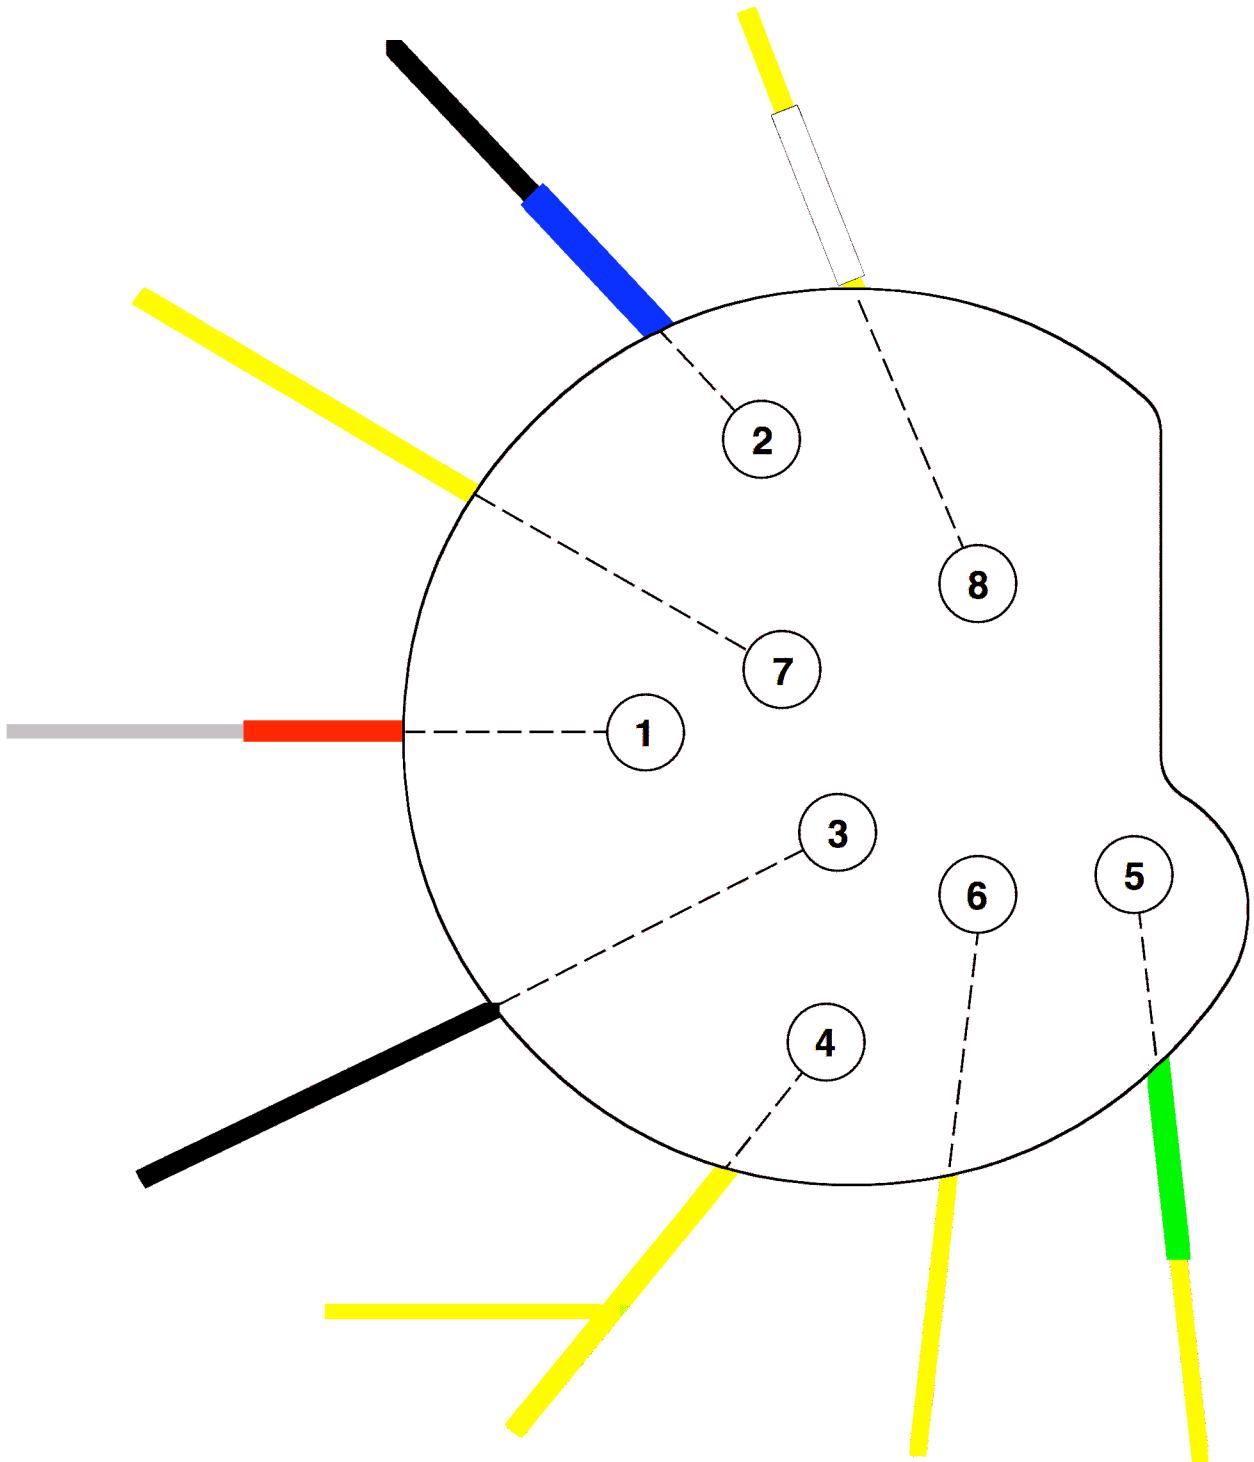

- 1 Supply for switching to 2
- 2 To ignition coil
- 3 Supply for switching to 4
- 4 To flasher unit, rear window heater and reversing light
- 5 Supply for 6
- 6 To wiper/washer switch, heater fan, dashboard warning lights.
- 7 Supply for switching 8
- 8 To starter relay.